



PARASOUND

NewClassic D 200 RS-232 Protocol

Protocol Specs

Baud Rate: 9600 bps
 Data Bit: 8 bits
 Stop Bit: 1 bit
 Parity: None
 Flow Control: No

Pin Connections

TxD: Pin 2
 RxD: Pin 3
 Gnd: Pin 5

Basic RS-232 Control: Hexadecimal control codes are shown below. The commas in the Hex code are merely for your ease of reading and are not part of the transmission. There are no spaces between any bytes. Before each command you must enable the RS-232 by issuing Hex code "835F", this is shown in all the examples. The end of each string must have a carriage return after the last byte with no space in between. In the Hex examples, the carriage return is already represented with code "0D". A straight-through Male DB9 cable is required for connecting to a control system.

| <u>Command Action</u> | <u>Hex Code</u> | <u>Example in Hex</u> |
|-------------------------|-----------------|-----------------------|
| <i>Power</i> | | |
| Power On | 11 | 83,5F,11,0D |
| Power Off | 57 | 83,5F,57,0D |
| <i>Transport</i> | | |
| Play | 1C | 83,5F,1C,0D |
| Stop | 45 | 83,5F,45,0D |
| Pause / Step | 46 | 83,5F,46,0D |
| Skip Forward | 14 | 83,5F,14,0D |
| Skip Reverse | 15 | 83,5F,15,0D |
| Fast Reverse | 1A | 83,5F,1A,0D |
| Fast Forward | 1B | 83,5F,1B,0D |
| Tray Open / Close | 43 | 83,5F,43,0D |
| <i>Cursor</i> | | |
| Cursor Left | 4C | 83,5F,4C,0D |
| Cursor Right | 4D | 83,5F,4D,0D |
| Cursor Up | 4E | 83,5F,4E,0D |
| Cursor Down | 4F | 83,5F,4F,0D |
| Enter | 1E | 83,5F,1E,0D |
| <i>DVD Video</i> | | |
| DVD Menu | 1F | 83,5F,1F,0D |
| DVD Top Menu | 5C | 83,5F,5C,0D |
| Audio Select | 52 | 83,5F,52,0D |
| Subtitle Select | 13 | 83,5F,13,0D |
| Angle | 53 | 83,5F,53,0D |
| Zoom | 55 | 83,5F,55,0D |
| Return | 5E | 83,5F,5E,0D |
| Page - | 0E | 83,5F,0E,0D |
| Page + | 0F | 83,5F,0F,0D |
| Title / Group - | 40 | 83,5F,40,0D |
| Title / Group + | 41 | 83,5F,41,0D |

Other Features

| | | |
|---------------------|----|-------------|
| Program | 12 | 83,5F,12,0D |
| Search | 17 | 83,5F,17,0D |
| Random | 18 | 83,5F,18,0D |
| Repeat A/B | 1D | 83,5F,1D,0D |
| Repeat | 4A | 83,5F,4A,0D |
| Clear | 58 | 83,5F,58,0D |
| Marker | 5B | 83,5F,5B,0D |
| Player Setup | 19 | 83,5F,19,0D |
| Dimmer | 47 | 83,5F,47,0D |
| Display | 54 | 83,5F,54,0D |
| SACD Area | 5F | 83,5F,5F,0D |
| Video / Digital Off | 5D | 83,5F,5D,0D |

Number Entry

| | | |
|------------|----|-------------|
| Number 0 | 00 | 83,5F,00,0D |
| Number 1 | 01 | 83,5F,01,0D |
| Number 2 | 02 | 83,5F,02,0D |
| Number 3 | 03 | 83,5F,03,0D |
| Number 4 | 04 | 83,5F,04,0D |
| Number 5 | 05 | 83,5F,05,0D |
| Number 6 | 06 | 83,5F,06,0D |
| Number 7 | 07 | 83,5F,07,0D |
| Number 8 | 08 | 83,5F,08,0D |
| Number 9 | 09 | 83,5F,09,0D |
| Number +10 | 0A | 83,5F,0A,0D |