

Zpre RS232 codes



Command available for zone(s)	Command	Purpose	Parameter 1	Purpose		
1	1	Zone power status	1	turn zone off		
			2	turn zone on		
			3	toggle zone on/off		
			4	turn all zones off		
			5	turn all zones on		
1	2	AV source selection	1	toggle between latest		
			2	select next audio source		
			3	select next video source		
			4	select next AV source		
			5	select previous AV source		
			8	select audio 1 source		
			9	select audio 2 source		
			10	select audio 3 source		
			11	select audio 4 source		
			14	select video 1 source		
			15	select video 2 source		
			16	select video 3 source		
			17	select video 4 source		
1	9	Master volume adjust	1	step volume up		
			2	step volume down		
1	10	Speaker output muting	1	turn muting off	Parameter 1	
			2	turn muting on		
			3	toggle muting on/off		
1	17	Button function active	1	Normal function	14	remote On-Off button
					22	remote Mute button
					25	remote Volume-Up button
					26	remote Auto-Audio/Turn-left button
					28	remote Auto-Audio/Turn-right button
					29	remote Volume-down button
					34	remote Audio 1 button
					35	remote Audio 2 button
					36	remote Audio 3 button
					37	remote Audio 4 button
					40	remote Video 1 button
					41	remote Video 2 button
					42	remote Video 3 button
43	remote Video 4 button					

Hardware Specification

EIA RS-232

9600 bps, 8 bits, 1 stop bit, no parity

9-pin female (DCE) D-connector, TXD on pin 2, RXD on pin 3, GND on pin 5

ASCII transmission, no flow control